

“How to” about ACCESS receiver

1. How to switch the S.Port /F.Port ?

---- For Taranis X-Lite Pro as an example, select the Receiver, press the ENTER button, select the Options, and select F.Port.

```

SETUP          2/12 SETUP          2/12 REC. OPTIONS R4
Module [Reg] [Rng] M Bind          7ms PWM
Options [Set] O Options          Telem. disabled
Receiver1 [R4] R Share          25mw Tele
Receiver2 [Bnd] B Delete        F.Port
Receiver3 [Bnd] B Reset        Pin1 CH1
External RF E Mode OFF         Pin2 CH2
Mode OFF          Pin3 CH3

```

2. How to use the OTA function?

---- For Taranis X-Lite Pro as an example, go to the SD CARD 2/7, and select the FW, press the enter button, select [Flash RX by OTA], power on the receiver, select the RX, go to the [ENTER], complete the flash process, the transmitter will display [Flash successful]. Re-power the receiver and wait for 3 seconds, the Green LED starts flashing indicates the receiver works properly at the moment.

```

SD CARD 2/7 SD CARD 2/7 SD CARD 2/7 SD CARD 2/7
[WIDGETS] [WIDGETS] [WIDGETS] [WIDGETS]
EXM170323] EXM170323] EXM170323] EXM170323]
[EXIT] [EXIT] [EXIT] [EXIT]
Archer-X_2.1.0.frsk Archer-X_2.1.0K.frk Archer-X_2.1.0K.frsk Archer-X_2.1.0K.frsk
Archer-X_2.1.0K.frk Archer-X_2.1.0K.frsk Archer-X_2.1.0K.frsk Archer-X_2.1.0K.frsk
Archer-X_2.1.0K.frsk Archer-X_2.1.0K.frsk Archer-X_2.1.0K.frsk Archer-X_2.1.0K.frsk
Archer-X_20200529.frsk Archer-X_20200529.frsk Archer-X_20200529.frsk Archer-X_20200529.frsk

SD CARD 2/7 SD CARD 2/7
[WIDGETS] [WIDGETS]
EXM170323] EXM170323]
[EXIT] [EXIT]
Archer-X_2.1.0.frsk Archer-X_2.1.0K.frk
Archer-X_2.1.0K.frsk Archer-X_2.1.0K.frsk
Archer-X_20200529.frsk Archer-X_20200529.frsk

Flash S.Port
Flash RX by int. OTA
Copy
Rename
Delete

Waiting for RX...

Select RX...
R4
Archer-X_2.1.0K.frk
Archer-X_2.1.0K.frsk
Archer-X_20200529.frsk

Archer-X
Curr Vers: 2.1.0
[EXIT] [ENTER]
Archer-X_20200529.frsk

Flash successful
[OK]
Archer-X_20200529.frsk

```

Note: Please do not do the binding operation in the near range while the firmware upgrading in progress.

Note: Update the firmware after the receiver gets bound.

3. How to enable/disable the receiver telemetry?

---- For Taranis X-Lite Pro as an example, select the Receiver, press the ENTER button, select the options, and enable/disable the telemetry.

```

REC. OPTIONS R4
7ms PWM
Telem. disabled
25mw Tele
F.Port
Pin1 CH1
Pin2 CH2
Pin3 CH3

```